



# How to disassemble the Lefeng RC generator

How do I fix a faulty generator controller?

Reset the fault on the controller. Refer to the Faults section for instructions, if necessary. Figure 68 contains generator set troubleshooting, diagnostic, and repair information. Check for loose connections before replacing parts.

How do you reassemble a generator muffler?

Slide tank from the generator chassis. Be sure to turn fuel off and remove the fuel line from the tank first. Place tank in a safe location away from any possible damage until reassembly is needed. Next remove the muffler mounts, guards header nuts, and the muffler. Secure the fasteners in a container to prevent loss.

How do I stop a generator set?

Open the switch to stop the generator set. Run the generator set with no load for at least 2 minutes to ensure adequate engine cooldown. The generator set may be connected to an optional remote emergency stop switch. See Figure 21. The remote emergency stop switch may be mounted near the generator set or in a remote location.

How do you remove a gas tank from a generator?

Remove the gas tank by removing the four corner bolts and end bar (2 bolts) on fuel knob side of the generator. Slide tank from the generator chassis. Be sure to turn fuel off and remove the fuel line from the tank first. Place tank in a safe location away from any possible damage until reassembly is needed.

How do you stop a generator in an emergency?

Press the red STOP button to shut down the generator set in an emergency. Using the emergency stop button bypasses the engine cooldown cycle, stopping the engine immediately. The controller emergency stop lamp lights (if equipped) and the unit shuts down.

How do you tighten a generator rotor bolt?

A light lubricant, oil, or grease on the end of the crank will assist in centering during the tightening of the rotor securing bolt. Using the 2 1/2 bolt, wrap the Teflon tape on the threads of the bolt and put the generator in an uphill position. Fill the rotor bolt cavity with standard motor oil, do not exceed 40 weight.

# How to disassemble the Lefeng RC generator

Contact us for free full report

Web: <https://www.publishers-right.eu/contact-us/>

Email: [energystorage2000@gmail.com](mailto:energystorage2000@gmail.com)

WhatsApp: 8613816583346

