

Who should use the Weidmüller PV DC combiner box user manual?

This user manual is intended to personnel that is involved in mechanical and electrical installation of a Weidmüller PV DC COMBINER BOX and moreover to service and maintenance personnel.

How do I connect a PV breaker to a combiner box?

PV output breaker must be in the OFF position before making any connections to combiner box. Connect earth ground before any other connection. Make sure all output connections are properly fastened to the combiner box and device. PV input connection should be made last.

How does the PV DC combiner box with monitoring work?

By default, the PV DC COMBINER BOX with monitoring comes with the internal communications pre-wired. This means that there is a communication cable between the device and 3 terminals at the bottom side of the enclosure.

How do I connect a DC combiner box to a solar inverter?

The output cables must be connected to a Level 2 combiner box, which will join DC+ and DC- from other Level 1 combiner boxes, or directly to the solar inverter. The enclosure of the PV DC COMBINER BOX is made of Glass Fibre Reinforced Polyester (GFRP). The enclosure provides IP65 and IK07 or higher in accordance with IEC 62208.

Does the PV combiner box have a DC disconnection switch?

The PV DC COMBINER BOX has a DC disconnection switch by default. The DC voltage of the switch depends on the voltage of the PV string. The switch disconnector making and breaking capacity (according to the IEC 60947-3) has been selected to assure that it can switch the circuit at full load at the maximum operating temperature.

Do I need a general inspection on the PV DC combiner box?

It is recommended to carry out a general inspection on the PV DC COMBINER BOX and the status of the installation. The installation must comply with either local and international regulations. All cables are in good condition. All connections of cables to the terminals are correct.

Contact us for free full report

Web: <https://www.publishers-right.eu/contact-us/>

Email: [energystorage2000@gmail.com](mailto:energystorage2000@gmail.com)

WhatsApp: 8613816583346

